

## Rapid Emergency Response System



### PRODUCT DATA SHEET

### BP119-110M | RapidAlert

#### PRODUCT DESCRIPTION

RapidAlert is a standalone rapid emergency response system designed to support fast, coordinated action during medical emergencies. When the integrated medical pull station is activated, the system immediately notifies designated responders via text message and/or phone call, providing the precise location of the emergency and establishing a communication channel to coordinate response efforts. Its clearly marked cabinet and familiar pull-station design ensure the system is easy to identify and intuitive to operate in high-stress situations. A built-in medical alert strobe further enhances visibility, drawing attention to the area where assistance is needed and helping responders quickly locate the incident.

#### FEATURES

- ✓ Dual communication pathways for enhanced reliability
- ✓ Integrated battery backup ensures operation during power outages
- ✓ Hinged protective pull station cover helps prevent damage and reduce accidental activations
- ✓ Ships pre-programmed for fast, plug-and-play deployment
- ✓ High-visibility wording and color design for quick identification in an emergency
- ✓ Latching pull handle stays in the down position, with clear "ACTIVATED" indication when operated
- ✓ Includes clear, step-by-step installation instructions
- ✓ Low-voltage operation eliminates the need for a licensed electrician

## CONSTRUCTION

The cabinet is made from 14 gauge steel with a powder coated finish. The pull station and strobe are molded from durable polycarbonate material.

## SPECIFICATIONS

**Shipping Weight:** 25lbs

**Unit Weight:** 23lbs

**Dimensions:** 4-1/8" W x 5-1/2" H x 2-3/16" D

**Temperature Range:** 32°F to 120°F (0°C to 49°C)

**Relative Humidity:** Up to 93% (non-condensing)

**For use indoors in a dry location**

**Input Power:** 16VAC/20VA

**Current Draw:** .17A

**Battery Type:** (2) 6 volt sealed lead-acid

**Battery Backup Time (standby):** 30 hours

**Battery Life:** Up to 4 years

## PULL STATION OPERATION

### ACTIVATION

To activate the dual-action pull station, push down on the handle. The actuator will latch in the down position and the word "ACTIVATED" will be clearly displayed. The pull station will remain in this position until it is manually reset.



### RESET AFTER ACTIVATION

To reset the pull station, insert the key provided into lock (bottom right corner) until firmly seated and turn counter-clockwise 90 degrees. Open the door to at least 45 degrees and the word "ACTIVATED" will no longer be displayed. Close and lock the door. This process will automatically reset the activation switch and return the pull station to a normal state.

## INCLUDES

- RapidAlert unit
- Cellular antenna
- Security bit
- Security screws
- Backup batteries
- Plug-in transformer
- Power cable
- Cord grip
- Installation instructions
- Installation template
- Mounting hardware

## ACCESSORIES



Replacement  
Plug-in Power Supply  
(BP010-100)




Replacement  
Protective Cover  
(BP204-096)



Replacement  
Security Screws & Bit  
(BP013-000K)



Replacement  
Batteries  
(BP002-000K)

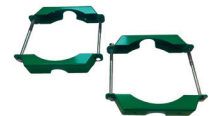

Pole Mount  
Bracket  
(BP012-000)



Medical Sign Bilingual  
Spanish/English  
(BP401-002M)



Medical Sign  
3-Way  
(BP401-001M)



Medical Sign  
Flat  
(BP402-001M)



Transformer  
Enclosure  
(BP014-030)